



PRO FLEX CROPLIFTER MOUNTING INSTRUCTIONS

PRO FLEX LIFTERS ARE ONLY SUITABLE FOR FLEX FRONTS

INFORMATION

Due to diverse header types, different mounting kits are available. Refer to the Mounting Kits page for the correct kit, or for more information, go to:


www.agpoint.com.au

www.schumacher-original.com

PRO FLEX LIFTER
by SCHUMACHER.

STEP 1


Remove bolts

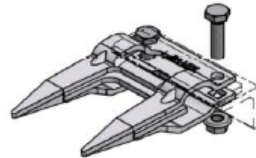

Remove existing bolts. It is recommended that you mount one *Pro Flex* croplifter on every 4th guard tip (every second guard)

STEP 2

Mount croplifter

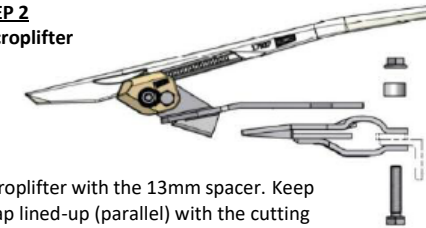


Mount the croplifter with the 13mm spacer. Keep the lifter strap lined-up (parallel) with the cutting gap on the guard

You may need to add flat washers on some guards

STEP 3


Push lifter all the way in, tighten nuts to 45Nm (33ft/lb)

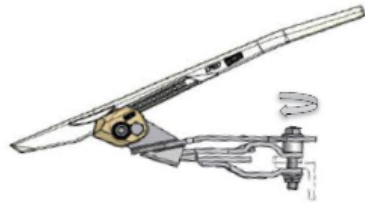

STEP 4

To change the angle, undo nuts on both sides

Undo left and right side nuts

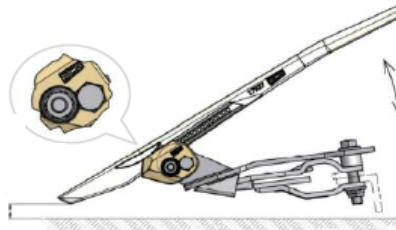


15-20mm

STEP 5

To change length, undo one nut only

Undo either left or right nut

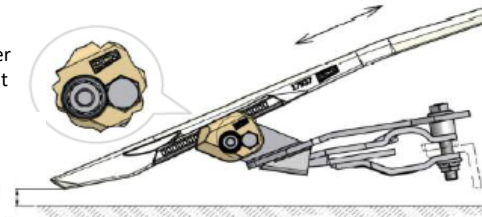

15-20mm

PRO FLEX LIFTER
by SCHUMACHER.

General mounting instructions for *Pro Flex* croplifter, dependant on guard and Mounting Kit

Mount croplifters (usually every 4th guard tip or every 2nd guard) and lower the header front to working position. Adjust the croplifters to get a 15-20mm clearance with the ground (approx width of a thumb) as shown below.



15-20mm

SCH
GEBR. SCHUMACHER